



INSTRUCTION MANUAL



- A - Information Display Panel (upper panel)
- B - Handles
- C - Legs
- D - Adjustable Level-correcting Feet
- E - PPE and Safe Practices Display Panels
- F - Pod Display Panels (lower panel)
- G - Pods

Setup

1



ATTENTION:
setup requires 2
people.


2



Lift the unit by the handles (1 person each end) and lower both sets of legs until fully unfolded (1). Push red Handle to lock in position (2).



3

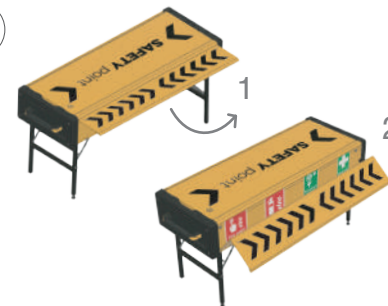

Unfold the front panel by pulling the lower front edge towards you (1), and then folding down (2).

4




Fold the front panel on to the legs, using the installed magnets to secure in place.

5



Open the rear compartment using the slot handle provided to reveal the upper panel support poles.

6

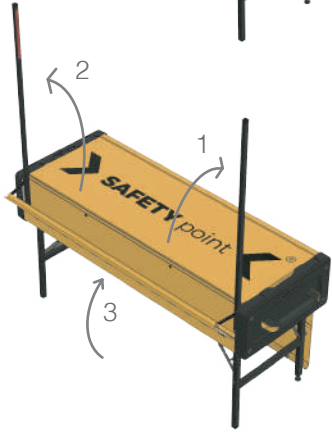

Raise the two frame support poles.

Closing the back panel will secure these poles in place.

7



Unfold the top panels.

Access handles can be found at either end of the product.

8




Use installed magnets to secure upper panel on to the support poles.

Positioning the Pods

1



To raise the pod platform, lift the red handle behind the pods. This will raise the entire platform and all 4 pods.

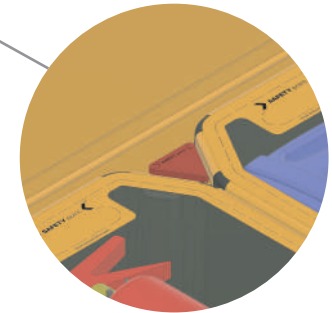

2




The pod platform can only be raised so far. At this point it will be in the correct display position.

Opening Pods



To open the pods, lift the clear lid by breaking the seal around the handle.

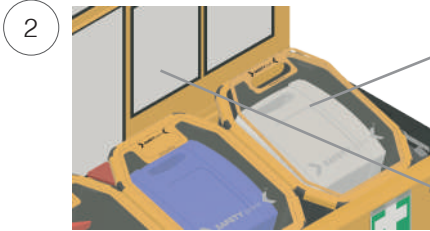

This will tear the rest of the seal, indicating that the pod has been used.



Note: A4 and A3 document wallets open from the bottom.




WARNINGS



If the surface is uneven, it is recommended to use the adjustable feet to level the unit.



For outdoors use, it is recommended to secure the unit to avoid tipping in strong winds. The legs can be used to attach straps or weights.

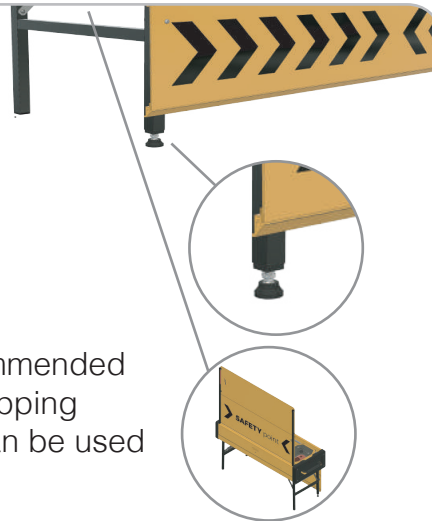

To order replacement pods, visit www.safetypointuk.com


Taking Down (for storage or transportation)



Lower the pod platform.




Carefully fold down the top panels using the hand access points at both ends and fold up the front panel to close the unit, using magnets installed to secure.

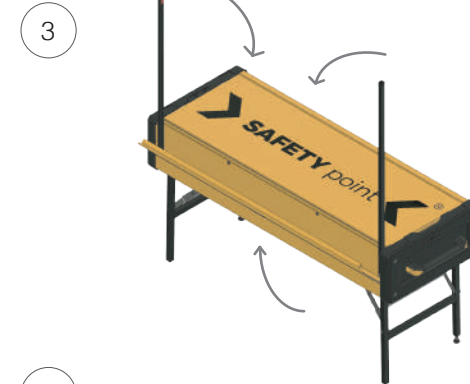

Open the compartment at the back, and fold the support poles, starting with the pole labelled 'This side first'.

Close the rear compartment to secure

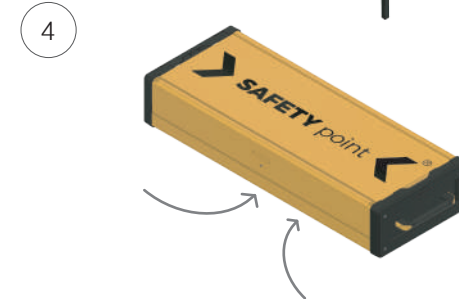

Unlock the legs using the red handle. Lift and secure legs to the underside of the unit. The unit can now be carried using the handles on either end.

Contact



03302 234207



sales@safetypointuk.com



SafetyPoint Ltd.
Chandos Business Centre,
87 Warwick Street,
Royal Leamington Spa,
Warwickshire,
CV32 4RJ



www.safetypointuk.com